


# DECAL APPLICATION INSTRUCTIONS


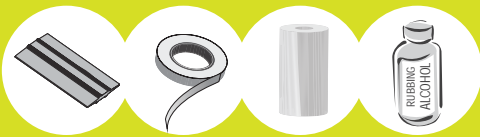


SQUEEGEE

MASKING  
TAPE


PAPER TOWEL  
OR CLOTH

RUBBING  
ALCOHOL

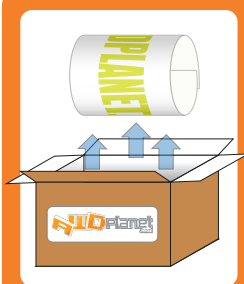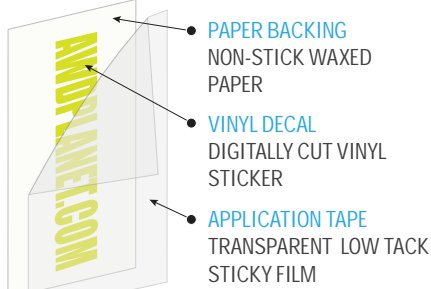

1. UNPACK THE DECAL .  
DECAL IS STRESSED  
FROM BEING ROLLED UP.
2. LAY LETTERING DECAL  
OUT ON A FLAT SURFACE  
SO THAT PAPER BACKING  
IS FACING UP. USE A  
SQUEEGEE TO STROKE  
THE DECAL BACKING FROM  
THE CENTER OF THE DECAL

TO THE SIDES TO INSURE THE DECAL IS FIRMLY  
ATTACHED TO THE APPLICATION TAPE.




NOTE: SURFACE TEMPERATURES SHOULD BE BETWEEN  
50F AND 90F BEFORE ATTEMPTING THE INSTALLATION  
WASH AND RINSE THE AREA WITH LIQUID DISH  
DETERGENT AND WARM WATER. THEN DRY THE  
SURFACE WITH A CLEAN, LINT-FREE TOWEL OR CLOTH.  
FINISH UP THE CLEANING PROCESS BY WIPING DOWN  
THE ENTIRE AREA WITH RUBBING ALCOHOL.



3. BEFORE REMOVING ANY BACKING, POSITION THE  
DECAL PERFECTLY AND EXACTLY WHERE YOU WANT IT.  
YOU CAN USE SMALL PIECES OF MASKING TAPE TO  
HOLD THE DECAL IN PLACE.

AWDPLANET.COM

4. APPLY MASKING TAPE TO ONE SIDE OF THE DECAL  
AND THE SURFACE.

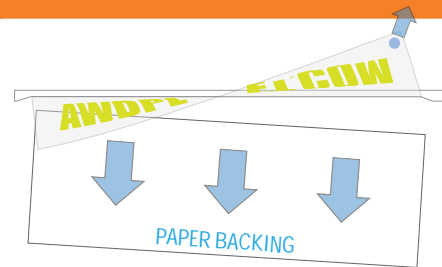

5. NOW WHEN ONE SIDE OF THE DECAL IS ATTACHED  
TO THE SURFACE WITH THE MASKING TAPE, REMOVE  
THE BACKING FROM THE DECAL. YOU WILL HAVE ONLY  
THE STICKY DECAL AND STICKY APPLICATION TAPE.



6. USING A SQUEEGEE, BEGIN APPLYING THE DECAL  
FROM ATTACHED SIDE WHILE HOLDING THE OTHER  
SIDE AWAY FROM THE SURFACE. ONCE THE DECAL IS  
INSTALLED, FIRMLY RUB IT WITH A TOWEL OR CLOTH.



7. REMOVE THE MASKING TAPE. REMOVE THE  
APPLICATION TAPE FROM THE LEFT OR RIGHT SIDE.  
DON'T PULL UP! PULL ACROSS TO INSURE YOU DON'T  
PULL THE DECAL RIGHT OFF THE SURFACE. PULL SLOWLY  
AND IF YOU NOTICE THE DECAL COME UP AS YOU PULL,  
STOP AND PUSH THE DECAL BACK WITH A SQUEEGEE  
AND TRY AGAIN.



www.awdplanet.com  
design@awdplanet.com